

INSTRUCTIONS

To Drain Water:

1. Loosen drain screw to drain bowl of water.
2. Tighten drain screw.
3. Run engine and check for fuel leakage.



To Replace Element:

1. Drain the unit by loosens the drain screw.
2. Loosen and remove the complete filter from the filter head.
3. Loosen the top cap from the clear bowl. Loosen and remove the filter element from the top cap. Please note both cap and bowl are reusable, do not dispose unless broken.
4. Take the new filter element and tighten to the cap. Then tighten the clear bowl on to the cap.
5. Coat filter O-ring with clean oil or grease and attach filter onto filter head, and then tighten securely by hand.
6. Run engine and check for fuel leakage.

